

Please be aware there could be sharp edges & corners. Wear suitable gloves.

FLAT PACK GALVANISED CORN BIN WITH PARTITIONS

Parts List:

Nuts & Bolts (taped to bottom section D)
1 - Back with Lid attached (B)
1 - Bottom Section (D)

2 - Side Sections (A)
1 - Front Section (C)
1 - Inner Top Frame (E)

Centre Partition/s (F)
1 - Two Compartment
2 - Three Compartment

Equipment Needed:


-Flat blade screwdriver
-Spanner

ASSEMBLY INSTRUCTIONS

** We recommend 2 people and suitable gloves for safe assembly and the bunker is positioned on a level surface **


*** The corn bin will be assembled upside down ***

1. Using part B place lid flat on the floor with the back upright.

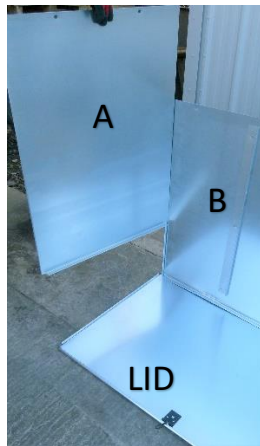

2. Slide the sides (A) into the folds with lipped edge first.

3. Slide in front section (C) with the staple facing outwards & centre runners on the inside

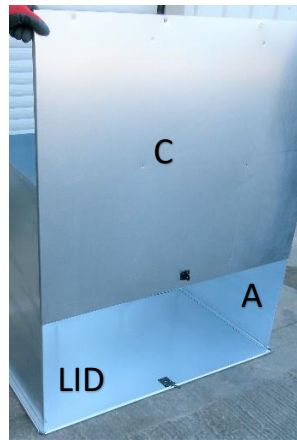


4. Position top frame (E) into the bottom of the bin, onto the folds of sections A & B



5. Slide partition/s (F) into centre runners

The quantity of partitions will depend on what variant of bin you have purchased

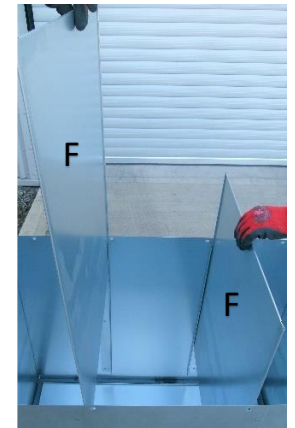

6. Insert bottom section (D) so that the holes line up & the folds are over the edges.

Fasten bottom firmly in place using nuts and bolts provided.

*****Turn bin over*****



7. Pull up the top frame (E) under top folds & bolt into place.

Tighten bolts with a screwdriver and spanner.



Assembly video can be found on – www.gatesrailingsdirect.co.uk/assembly-instructions